EL-6710S

SHARP SERVICE MANUAL

CODE : 00ZEL6710SSME

REPLACEMENT MODEL

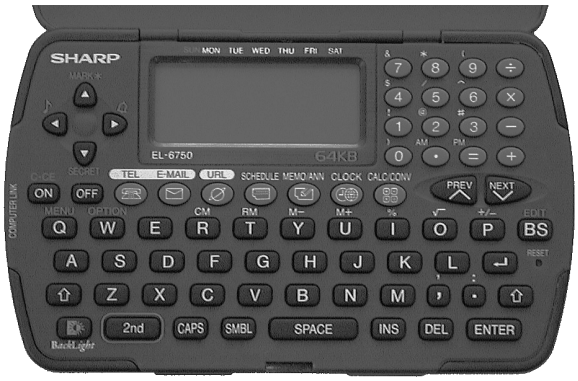

** MODEL EL-6710S**

STANDARD FUNCTION			12 digits 1M
DISPLAY SECTION	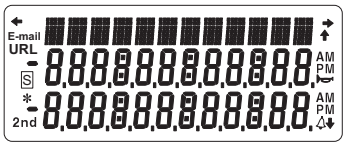		
	ELEMENT :	TN-LCD	PARTS NAME : CH-70189
	NUMERAL :	UPPER LINE : 12 digits LOWER LINE : 12 digits	SYMBOL : (Refer to above figure)
		DOT : 5 x 5 CHARACTER PITCH : 3.6 (mm)	
	KEY SYSTEM :	Rubber key	

LSI	Name : LI-359003		
	Type : CHIP		
POWER SUPPLY	AC : X	DC : O	
POWER SUPPLIES	CR2032 x 1 pc		
AC ADAPTOR			
RECHARGEABLE BATTERY			
POWER CONSUMPTION	0.003 W		
AUTO POWER OFF TIME	Approx. 7 minutes		
MEMORY PROTECT	Yes		
DIMENSIONS (mm)	(When OPEN) 149.6 (W) 176.5 (D) 9.0 (H) (When CLOSED) 149.6 (W) 91.0 (D) 13.0 (H) (mm)		
CALCULATIONS			

Four arithmetic calculation, Constant calculation, Power calculation, Chain calculation, Reciprocal calculation, % calculation, Add-on (discount) calculation

OTHER SPECIFICATIONS

Display : 3 lines of 12 digits
Memory capacity : 34,440 bytes
Clock mode :
Accuracy : ± 30 seconds / month at 25°C / 77°F
Display : Year, month, date, day of the week, hour, minute, seconds, AM / PM
Clock system : 12 hour / 24-hour format (switchable), world clock function, daylight saving time / summer time display, daily alarm
Telephone mode (Business, Personal, Other) Entry and recall of telephone listing (name, number, E-mail address, URL)
Schedule mode : Entry and recall of schedule (year, month, day, hour, minute and item), day of the week confirmation, schedule alarm
Calculator mode : 12 digits (with calculation status symbols) arithmetic calculations, percentage, square root, memory calculation, etc.
Currency / unit Conversion : A kinds of currencies and unit (editable on the display)
Operating temperature : 0 to 40 °C (32°F to 104°F)
Power supply : 3V ⎓ (DC) (Lithium battery CR2032 x 1)
Battery life : Approx. 2 year at ambient temperature of 25°C (77°F), assuming the following daily use : 30 minutes display, alarm sounding for 20 seconds and key touch tone turned on / off 100 times.
Weight : Approx. 115 g (including battery)
Accessories : 1 lithium battery (installed), operation manual

Parts marked with "⚠" is important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

SHARP CORPORATION

This document has been published to be used for after sales service only.
The contents are subject to change without notice.

TS

Parts List

No.	PARTS CODE	PRICE RANK	NEW MARK	PART RANK	DESCRIPTION	
1	0GV9104-YC03C0	AD	N	D	Manual (ENGLISH)	[U1U, Y12, LL0, LP0, LD0, LQ0]
	0GV9104-YCA3C0	AD	N	D	Manual (SPANISH)	[U1U, LL0, LP0]
	0GV9104-YC09C0	AD	N	D	Manual (FRENCH)	[Y12, LM0, LN0, LO0, LE0]
	0GV9104-YC0DC0	AD	N	D	Manual (PORTUGUESE)	[LL0, LP0]
	0GV9104-YC04C0	AD	N	D	Manual (GERMAN)	[LM0, LN0]
	0GV9104-YCA9C0	AD	N	D	Manual (ITALIAN)	[LM0, LN0]
	0GV9104-WNASC0	AD		D	Manual (SWEDISH)	[LO0]
	0GV9104-WNBSC0	AD		D	Manual (NETHERLAND)	[LO0]
	0GV9104-WNACC0	AD		D	Manual (CHINESE)	[LD0, LQ0]
	0GV9104-WNBCC0	AD		D	Manual (ARABIC)	[LD0, LQ0]
2	0GV21WN-041KA0	AC		D	Battery door	
3	0GV6217-0462D1	AB		C	Screw	(for BATT.DOOR)
4	0GV8106-WNJ0GA	AE		D	Import label	[LL0]
5	0GV8106-WNJ0CA	AC		D	Chinese label	[LD0]
6	0GV8106-WNJ06P	AD		D	Oparation label (French)	[Y12]

Battery Replacement

(1) Battery replacement time

If the display becomes dim and difficult to read, immediately replace the battery with a new one. Continued use of the Organizer with an exhausted battery can alter or clear the memory contents.

- Make sure the power is turned off before replacing the batteries.
- Do not press C·CE ON until the battery replacement procedure is completed.
- Do not leave the Organizer installed with the exhausted and new batteries simultaneously.

(2) Replacing the battery

1. Press OFF to turn the power off.
2. Loosen the screw and remove the battery holder cover on the back of the unit.
3. Install a new battery with the (+) side facing up into the upper or lower empty battery holder. (Fig. 1)

(Fig.1)

4. Remove the exhausted battery by prying it out with a ball-point pen. (Fig. 2)

(Fig.2)

5. Replace the holder cover and secure it with the screw.
6. Press C·CE ON to turn the power on. If nothing appears on the screen, press the RESET switch and press C·CE ON again.
7. Set the clock.

Note)

CAUTION FOR BATTERY REPLACEMENT

(Danish) ADVARSEL!
Lithiumbatteri - Eksplosionsfare ved fejlagtig håndtering.
Udskiftning må kun ske med batteri
af samme fabrikat og type.
Levér det brugte batteri tilbage til leverandoren.

(English) Caution!
Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type
recommended by the equipment manufacturer.
Discard used batteries according to manufacturer's instructions.

(Finnish) VAROITUS
Paristo voi räjähtää, jos se on virheellisesti asennettu.
Vaihda paristo ainoastaan laitevalmistajan suosittelemaan
tyyppiin. Hävitå käytetty paristo valmistajan ohjeiden
mukaisesti.

(French) ATTENTION
Il y a danger d'explosion s' il y a remplacement incorrect
de la batterie. Remplacer uniquement avec une batterie du
même type ou d'un type recommandé par le constructeur.
Mettre au rébut les batteries usagées conformément aux
instructions du fabricant.

(Swedish) VARNING
Explosionsfare vid felaktigt batteribyte.
Använd samma batterityp eller en ekvivalent
typ som rekommenderas av apparattillverkaren.
Kassera använt batteri enligt fabrikantens
instruktion.

Packing form

Form	SPEC	Country
Blister	U1U	SEC, LAG
	Y12	SECL
	LL0	SDB
	LN0	SEIS, SEF
	LP0	SUK, SCA, SEES, SRS, STCL
	LE0	SEF
Universal	LM0	SEEG, SEA, SEZ
	LO0	SEB, SES
	LQ0	Agent
	LD0	SRH

COPYRIGHT © 1999 BY SHARP CORPORATION

All rights reserved.
Printed in Japan.
No part of this publication may be reproduced,
stored in a retrieval system, or transmitted.
In any form or by any means,
electronic, mechanical, photocopying, recording, or otherwise,
without prior written permission of the publisher.

SHARP CORPORATION
Information Systems Group
Quality & Reliability Control Center
Yamatokoriyama, Nara 639-1186, Japan

1999 June Printed in Japan (t)